




**R1**


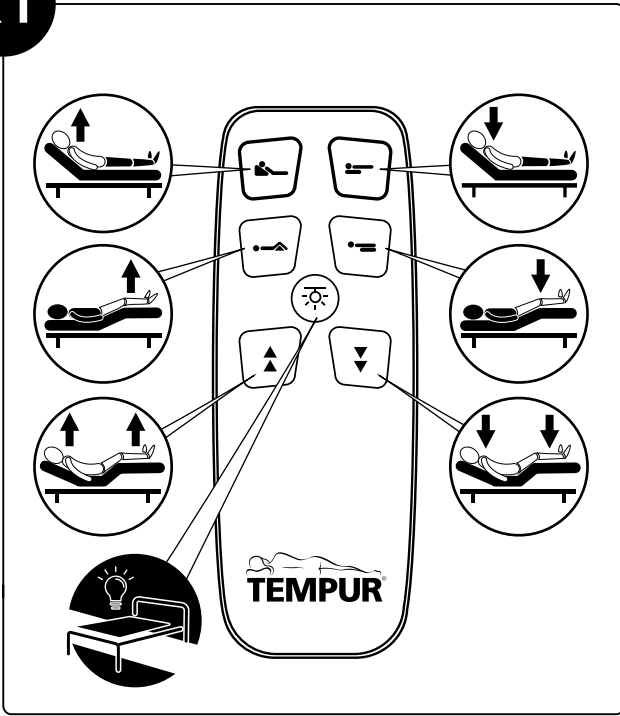


**R2**


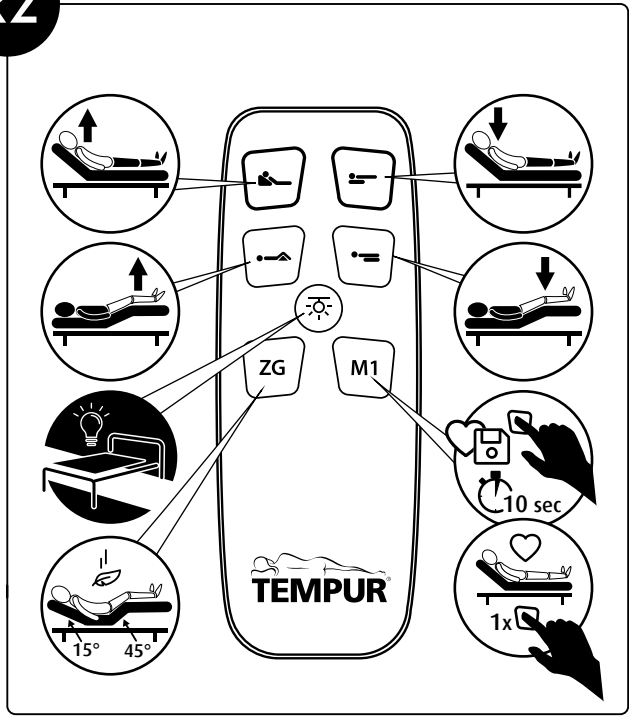


**R3**

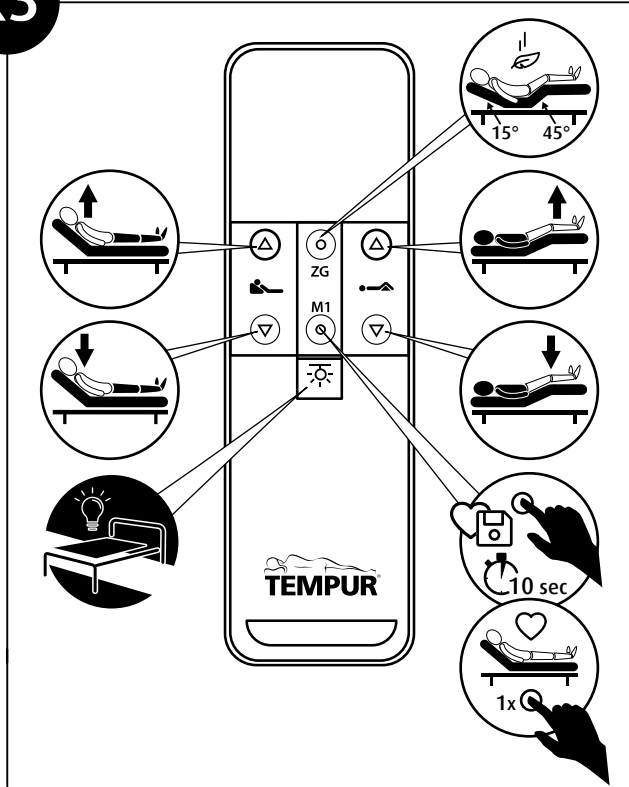

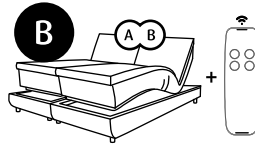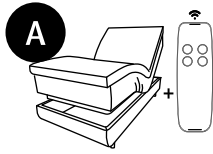

warranty.tempur.com

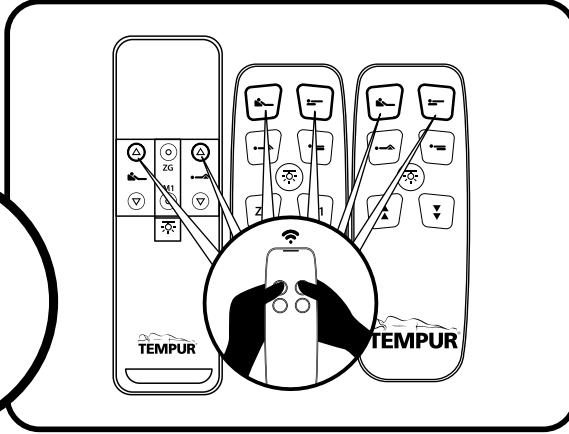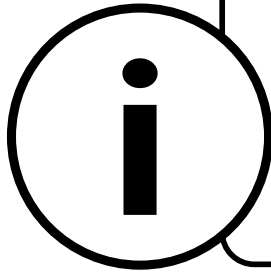

**A**

1. → 2.

< 3 min

1.

2. >4 sec

1,5 sec

**B**






1. → 2.



< 3 min

1.

2. >4 sec

1,5 sec

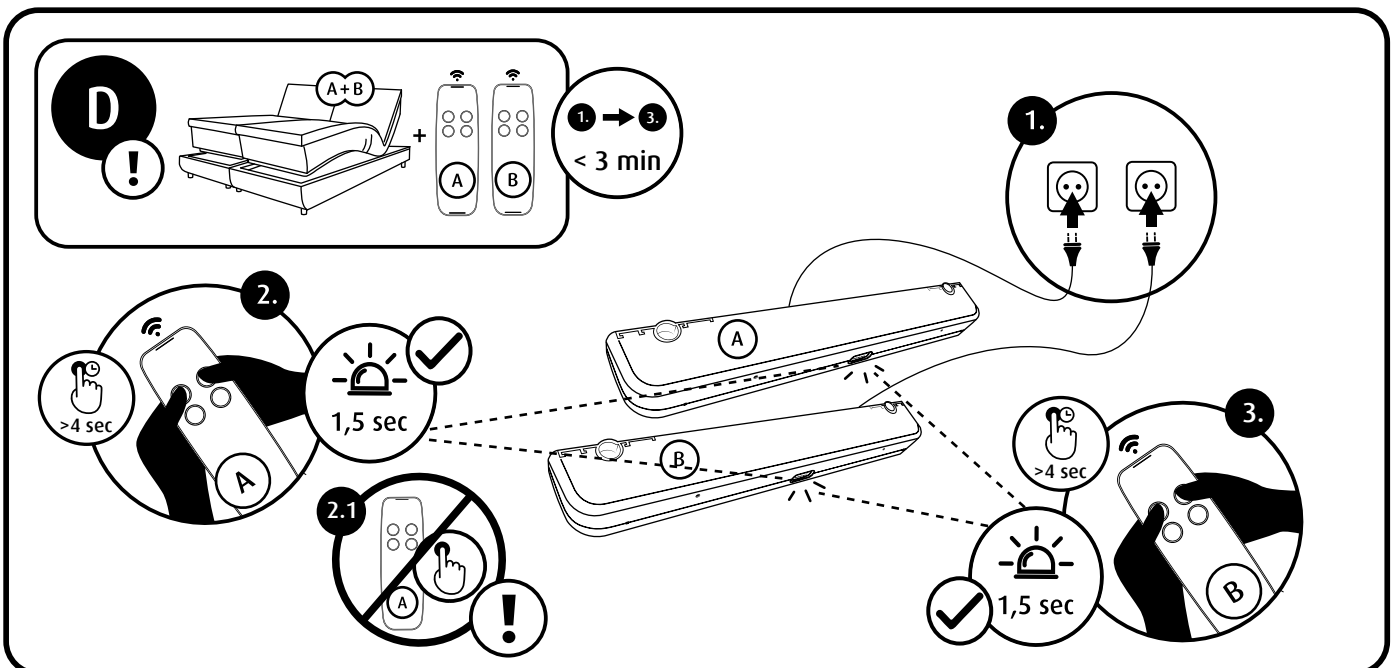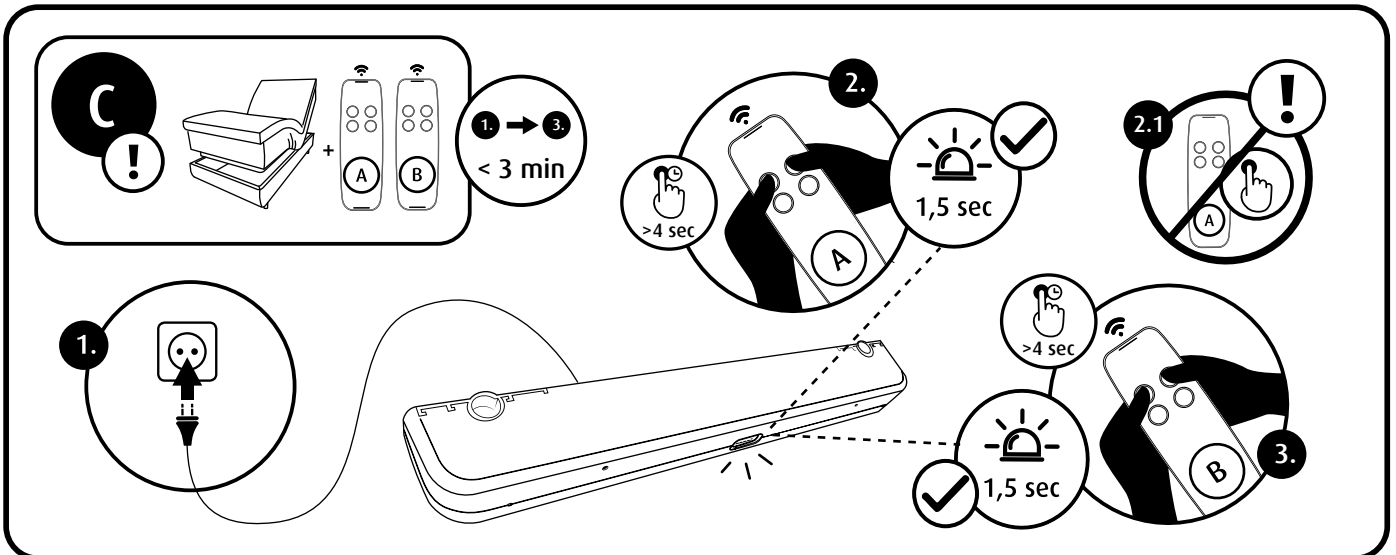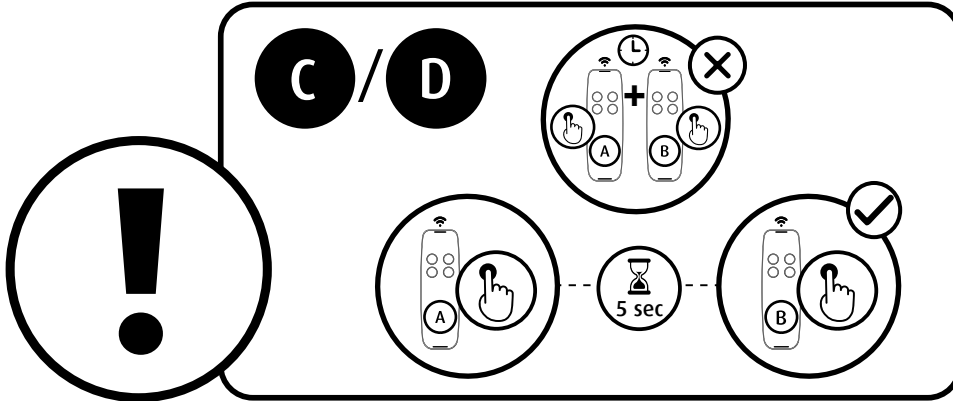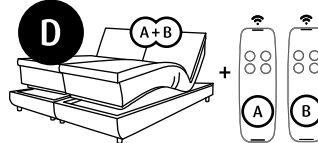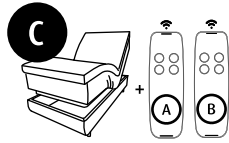

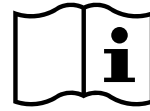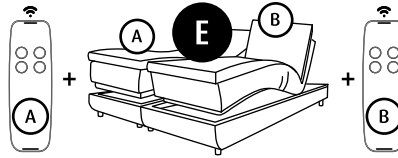

**E**

1. → 6. < 3 min

1. Plug the power cord into the wall outlet.
2. Press and hold the power button on remote A for >4 sec. A 1,5 sec light indicator is shown.
3. Press the power button on remote A.
4. Plug the power cord into the wall outlet.
5. Press and hold the power button on remote B for >4 sec. A 1,5 sec light indicator is shown.
6. Press the power button on remote B.

**a**

1. Plug the power cord into the wall outlet.
2. Wait 1 min.
3. Press buttons A, B, C, D, E in sequence.

**b**

1. Press the power button on remote A.
2. Plug the power cord into the wall outlet.
3. Wait 5 sec.
4. Press buttons A, B, C, D, E in sequence.